

# **TORO<sup>®</sup>**

## **STEAM BRUSH**




**Model: E-6001A**

**Instruction Manual**

## TECHNICAL SPECIFICATIONS

Model Number	EL-6001A
Operating Voltage	220-240V
Operating Frequency	50-60Hz
Power Consumption	1000W

## PRODUCT OVERVIEW

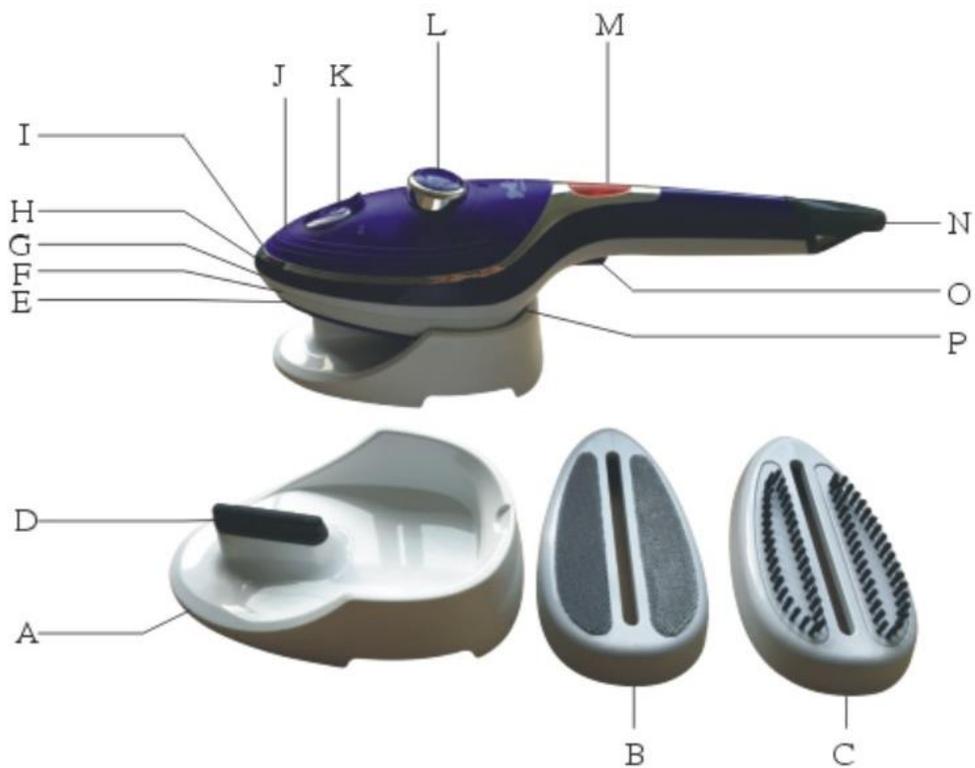

A. Base	B. Flat Brush Attachment
C. Upholstery Brush Attachment	D. Rubber Shield
E. Soleplate	F. Skirt
G. Up Handle	H. Bottom Handle
I. Decoration	J. Water Tank
K. Water Inlet	L. Temperature Knob
M. Temperature Indicator	N. Cord Protector
O. Strong Steam Button	P. Attachment Release Button

## **IMPORTANT SAFETY INSTRUCTIONS**

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Care should be taken when using the appliance due to the emission of steam.
- DO NOT touch soleplate or steam out let it is hot.
- Always unplug the appliance during filling and cleaning.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom, Ask your installer for advice.
- Do not use this appliance near water.
- While unit is connected to mains power supply, operator must not leave it unattended.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- Do not use iron if it has been dropped or there are visible signs of damage or leaks. Contact service centre for product support.
- The iron should be used on a flat and stable ironing board.
- DO NOT leave iron unattended while it is connected to mains power.
- The plug must be removed from the outlet before the water tank is filled with water.
- When placing the iron on its stand, ensure that the surface on which it is placed is stable.
- Extreme caution should be taken when using the appliance due to the emission of steam
- Always unplug the appliance during filling and cleaning

### **NOTICE:**

- Before connecting to power supply, please check if the power supply voltage and current rating of the product correspond with the product rating label.
- When using, it is recommended to use distilled water.
- After using, turn the temperature knob to "OFF".
- Keep away from children when using the steam iron.
- Keep the cord away from the soleplate.
- Retain instruction manual for future reference.

## OPERATING PROCEDURE

### NOTE:

- The steam brush may give off some smoke when you use it for the first time. The smoke will disappear after a short time.
- DO NOT touch soleplate or steam it is hot and can burn or scald.

### Iron Setting

- Rotate the Temperature Knob (L) clockwise, put the iron on a stable surface.

### Filling with water (for steam ironing)

- Please fill this iron with normal tap water before using for the first time.
- For refilling, you can also use tap water. However, if the water is very cloudy, it is advisable to use distilled water.
- Always remove the plug from the wall socket before filling the iron.
- Open the water inlet. Use the water cup to fill clean tap water into water tank up to MAX level. Or use the measuring beaker with spout for this purpose.
- Replace water tank cover and dry the spilt water around the enclosure of the appliance. Do not overfill.

### Temperature Setting Guide

Fabric	Temperature Setting
NYLON / ACRYLIC / ACETATE	●
SILK / RAYON / POLYESTER	●●
WOOL / COTTON	●●●
LINEN	MAX

- Use the temperature knob to set the iron temperature to suit the type of material. We recommend using the above table as a guide. The temperature indicator light indicates that the soleplate is heating up. When the temperature indicator light goes out, the required temperature has been reached.

### Dry ironing

- Take out the brush
- Rotate the temperature regulating knob to the temperature dial which the clothes require, the temperature indicator light will illuminate, put the iron on the smooth and stable place.
- After the temperature indicator light turns off, you can begin to ironing.

### Strong Steam

- Press the strong steam button, the baseplate will release a strong steam.
- **ATTENTION:** Only use the strong steam push button when the steam iron has reached the maximum temperature.
- Do not press this button more than 3 times at once.

## CARE AND CLEANING

- Before cleaning, unplug the iron from power socket, and allow the appliance completely cool down.
- Once item is cool, then clean with a damp cloth; do not immerse it into water or other liquids.
- Regularly rinse the water tank with clean water. Empty the water tank after cleaning.
- If ironing clothes with high temperature, a garment table or ironing board is not recommended. As it will cause burning to your clothes and leave residue on the soleplate. If this occurs, pass the iron over a piece of damp cloth for several minutes to remove any residues from soleplate.
- After use, turn off all switches on the iron, disconnect the unit from mains power socket, empty the remaining water from the water tank, and then store the iron after it completely cools down.

## WARNING



Do not use this appliance near water in bathtubs, showers, basins or other vessels containing water. This unit is NOT to be immersed in water or any other liquids.

## CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Please use your local return and collection systems, or contact your local waste department. They can advise where to take the product for environmental safe recycling.

## WARRANTY INFORMATION

- The manufacturer provides warranty in accordance with legislation for a warranty period of 1 year, starting from the date on which the appliance is sold to the end user.
- The warranty only covers defects in material or workmanship.
- The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original invoice (with purchase date) must be submitted.
- The warranty will not apply in cases of:
  - Normal wear and tear. Use of force, damage caused by external influences
  - Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
  - Damage caused by non-observance of the user manual
  - Partially or completely dismantled appliances

## AFTER SALES SUPPORT

Please contact our service centre for after sales support. Email: [support@efo.net.au](mailto:support@efo.net.au)